


## Use New Driveshaft Bolts

Every time you disconnect an FMTV's driveshaft—like when you service its transmission oil filters—you must replace the yoke end cap bolts.

They cannot be re-used because they will not hold tight. The yoke cap will come off and the U-joint could come apart.

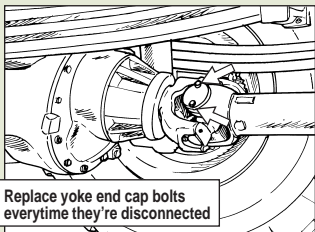

Replace yoke end cap bolts everytime they're disconnected

To get the bolts, use NSN 5305-01-472-3766. The NSN is not found in either FMTV TM. If you have any 2 1/2-ton models, make a note for Items 4 and 7 in Fig 128 of TM 9-2320-365-24P. If you have any 5-ton models, make a note for Item 4 in Fig 153 and Items 4 and 11 in Fig 154 of TM 9-2320-366-24P-1.

Also make a note in your maintenance TMs that the bolts must be replaced with new ones every time the yoke is disconnected.

